wolffe pack™

THE ORBITAL BACKPACK

Swings your bag to the front,
stays strapped to your back.

Designed in Great Britain

GOOD DESIGN AWARD JAPAN

WOLFFEPACK CAPTURE

The ultimate backpack for cameras and access

wolffepack™

The world's only backpack that swings all your stuff
to the front but stays strapped to your back.

For important product information, guidance, instructions, and
video demonstrations visit wolffepack.com
Always follow the safe usage instructions and do
not exceed recommended load limits, as on our website

Patents and designs granted and pending worldwide:
see www.wolffepack.com/pages/t-cs.
Wolffepack & the W logo, and expetoSYSTEM are trademarks.
©2016

UK Patents GB2513227 and GB2511573.
International Patent Application No WO2014135894.
US Patent Application 29/499307.
RCDs 2690362 and 1403745.

Wolffepack Capture Grey
CAPGY1

5 060443 930024 >

1. GRAB HANDLE

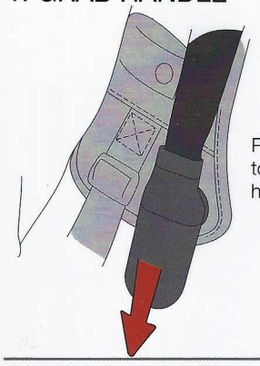

Pull handle downwards
to unlock magnetic
handle.

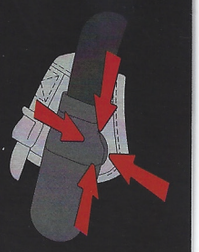

NOTE: Handle reattaches
from any direction.

2. RELEASE LOCK

Hold thumb FULLY down
on red button and
KEEP it down, like a
clenched fist.
Pull handle FIRMLY
forwards & down, until
release with soft 'click'.

NOTE: This action is like
a LONG SLOW PUNCH.
KEEP button FULLY
pressed until bag drops.

3. LOWER BAG

Raise handle smoothly
until it reaches the 'hood'
at top of the shoulder strap.

Lock resets ONLY when
handle sits inside the 'hood'.

LET BAG DROP FULLY &
let go of handle. Bag will not
reach the floor so do NOT
hold onto handle or catch
bag before it drops fully.

NOTE: LET BAG DROP
FULLY and ensure
handle sits inside 'hood'.

4. ACCESS BAG

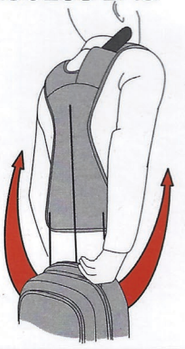

Grab bag behind you.
It has a soft loop at
the top of bag.

Swing bag round to
your front, either side.

When ready to raise,
place bag behind you
again and let it go.

NOTE: Wolffepack hooks
can hold bag on front.

5. RAISE BAG

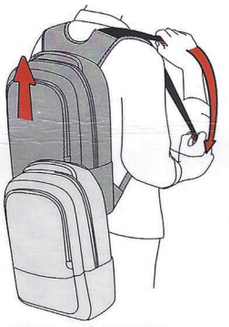

Grab handle from the
'hood' at top of right
shoulder strap.

Pull handle FIRMLY down
until handle stops &
cannot be pulled
any further.

This is a LONG, FIRM,
PULL to raise the bag up.

Replace handle in
magnetic clip.

NOTE: Keep thumb OFF
red button for the Raise.
Bag must be
FULLY raised before
next release.

wolffe pack™

THE ORBITAL BACKPACK